

CONGRATULATIONS

You're now the owner of the most compact gaming keyboard which combines the tried and tested with the new and innovative. Based on a standard keyboard layout, the Arvo features two revolutionary inventions giving you some amazing additional functions. With its compact size, the thumbster keys and the dual-assignment Num Pad, the Arvo is a piece of gaming equipment in a class of its own.

Compact + Ergonomic

Thanks to its compact size, the Arvo leaves more space for your gaming equipment and helps you organize your desktop more effectively. All keys, including the F-keys, are flatter than those of other gaming keyboards and are the perfect height for gaming. A silent and optimally defined keystroke makes the keyboard perfect for accurate gaming.



Expand your thumbs' potential

This keyboard finally puts your thumbs to real use. Assign your most important shortcuts and macros to the thumbsters which are located below the spacebar – any keyboard command will now be available at the touch of a thumb. The keys are designed for easy access, plus their optimum pressure point prevents them from being pressed accidentally.

Num Pad vs. Game Mode

As an added benefit to Num Pad gamers, the keyboard features a dual-assignment Num Pad. You can stick to the standard functions or switch to gaming mode. This gives you two additional macro keys, located right next to the illuminated arrow keys, which can be assigned individual macros and shortcuts.



QUICK-INSTALLATION GUIDE

IMPORTANT DOCUMENT

Should you need assistance ...

Our support team is ready to help with any technical questions. Just send an e-mail to support@roccat.org. Or visit our website at:

WWW.ROCCAT.ORG/SUPPORT

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Arvo – Compact Gaming Keyboard
- Quick-Installation Guide

SYSTEM REQUIREMENTS

- Windows® XP, Windows Vista® 32/64 bit, Windows® 7 32/64 bit, Windows® 8/Windows® 8 Pro
- USB 1.1 Port
- Internet connection (for driver installation)

TECH SPECS

- Compact Keyboard Layout with 97 Keys
- Anti-Ghosting capability
- Mode Switch Key for dual Num Pad assignment
- 3 programmable Thumbster Keys (E1-E3)
- 2 additional, programmable Macro Keys (E4-E5)
- 6 illuminated Status Keys (Caps Lock, Mode Switch, Directional Keys)
- 1000Hz polling rate
- Extended USB cable

ORGANIZE YOUR DESKTOP WITH ROCCAT™ SDMS

MORE INFO ON WWW.ROCCAT.ORG/SDMS




PLEASE USE YOUR PRODUCT'S SERIAL NUMBER

(LOCATED ON THE BOTTOM LABEL) FOR

REGISTRATION. SIGN IN AT:

WWW.ROCCAT.ORG/REGISTER

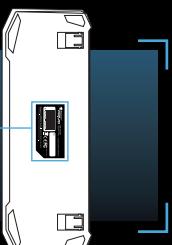


ROCCAT GmbH


Otto von Bahrenpark, Paul-Dessau-Str. 3G, 22761 Hamburg, Germany

© 2013 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.


1 FOLDING OUT STANDS

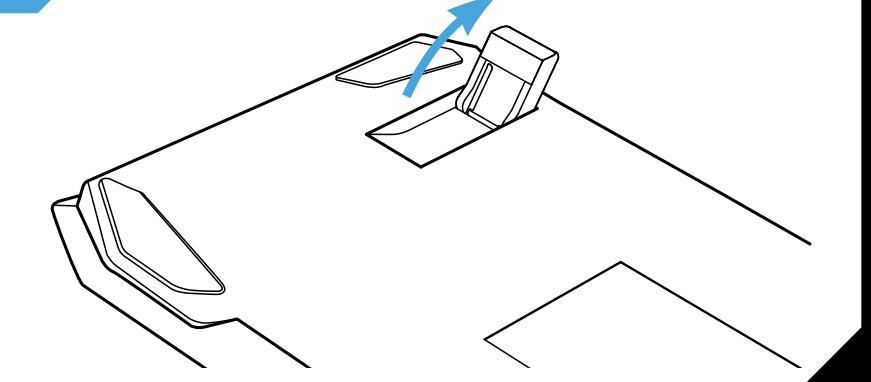

2 CONNECTING TO COMPUTER (USB)

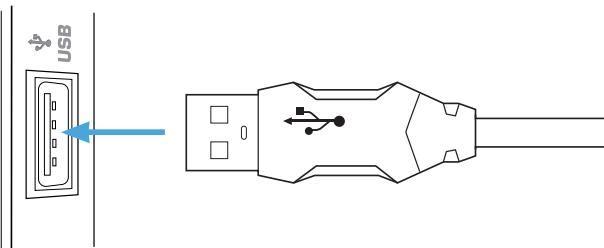


3 NUM PAD MODE

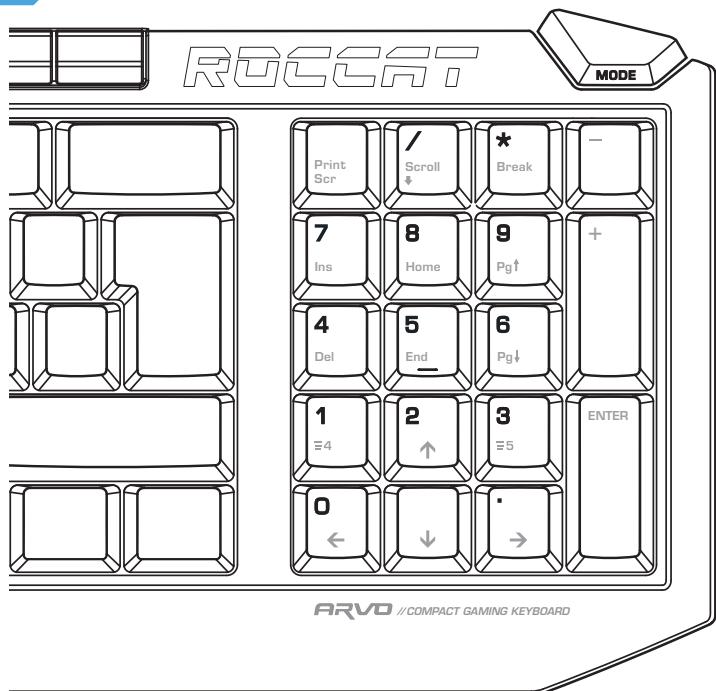

BLACK = activated keys in Num Pad Mode

4 GAMING MODE

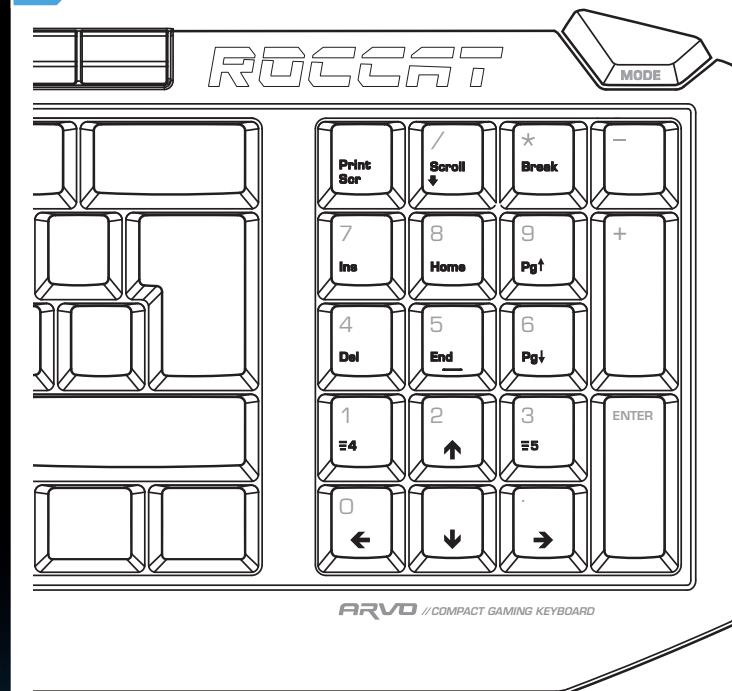

BLACK = activated keys in Gaming Mode

EN

1. For a more ergonomic position, fold out the stands on the base of the keyboard.
2. Plug the USB connector into any free USB port on your computer.
3. Press the Mode Switch button to activate Gaming mode. You'll now be able to use macro buttons 4 and 5, as well as the directional keys.
4. If you press the Mode Switch button again, the Mode Switch LED will light up blue and the normal numeric keys on the numpad will be available.

DE

1. Für einen ergonomischeren Stand klappe die Füße an der Unterseite der Tastatur aus.
2. Verbinde den USB-Stecker mit einer freien USB-Schnittstelle deines Rechners.
3. Betätige die Mode-Switch-Taste, um den Gaming Mode zu aktivieren. Die Makrotasten 4 und 5 sowie die Pfeiltasten sind nun nutzbar.
4. Drückst du die Mode-Switch-Taste erneut, leuchtet die Mode-Switch-LED blau und dir stehen die normalen Zifferntasten des Num Pads zur Verfügung.

ES

1. Para un equilibrio más ergonómico, saca las patas que están debajo del teclado.
2. Conecta el cable USB a un puerto USB libre en tu ordenador.
3. Pulsa la tecla mode switch, para activar el modo juegos. Las teclas macro 4 y 5 y las flechas del cursor pasan a ser operativas como macros.
4. Si vuelves a pulsar la tecla mode switch, se enciende en azul el LED mode switch y vuelves a disponer de las teclas del bloque num. como cifras normales.

FR

1. Déplie les pieds sur la face inférieure du clavier pour une plus grande ergonomie.
2. Relie la fiche USB à une prise USB libre de ton ordinateur.
3. Appuie sur la touche Mode Switch pour activer le mode Gaming. Tu peux alors utiliser les touches macros 4 et 5 et les touches curseurs.
4. Si tu appuies à nouveau sur la touche Mode Switch, le voyant Mode Switch bleu s'allume et tu peux taper les chiffres normalement sur le pavé numérique.

FI

1. Käännä näppäimistön alla olevat jalat ulos ergonomista asentoon varten.
2. Liitä USB-pistoke tietokoneesi vapaaseen USB-liittäntään.
3. Aktivoi peltilätilan vaihtonaapäinä painamalla. Makronäppäimiä 4 ja 5 sekä nuolinäppäimiä voidaan nyt käyttää.
4. Kun tilanvaihtonaapäinä painetaan uudelleen, tilanvaihdon merkkivalo palaa sinisenä ja tavomaiset numeronäppäimet ovat käytettävissä.

DK

1. Til ergonomicisk opstilling klappes fodderne på tastaturets bund ud.
2. Forbind USB-stikket med et ledigt USB-interface på din computer.
3. Tryk på Mode-Switch-tasten for at aktivere gaming mode. Makrotasterne 4 og 5 som også pletasterne kan nu bruges.
4. Hvis du igen trykker på Mode-Switch-tasten, lyser Mode-Switch-LED blå og de almindelige taltaster er aktiveret.

RU

1. Для обеспечения эргономичного положения открой ножки на нижней стороне клавиатуры.
2. Соедини USB-штекер со свободным USB-портом компьютера.
3. Нажми кнопку Mode Switch, чтобы активизировать игровой режим. Теперь можно макротастами 4 и 5 и кнопками со стрелками.
4. Если еще раз нажать кнопку Mode Switch, светодиод Mode Switch загорается синим цветом и цифровыми кнопками цифрового блока клавиатуры можно пользоваться в обычном режиме.

PL

1. Aby uzyskać pozycję ergonomiczną, rozłóż nóżki po spodniej stronie klawiatury.
2. Podłącz wtyk USB do wolnego portu USB komputera.
3. Za pomocą przełącznika trybu pracy możesz włączyć tryb gier. Można teraz korzystać z klawiszy makr 4 i 5 oraz z klawiszami kursora.
4. Naciśnij ponownie przełącznik trybu pracy, a dioda LED trybu pracy zacznie świecić w kolorze niebieskim. Dostępne są teraz normalne klawisze klawiatury numerycznej.

TR

1. Ergonomik bir duruş için klavyenin altındaki ayakları dışa katla.
2. USB soketini bilgisayarındaki boş bir USB arabirimine tak.
3. Gaming modunu etkinleştirmek için Mode-Switch tuşuna bas. Makro tuşları 4 ve 5 ile ok tuşları artık kullanılabilir.
4. Mode-Switch tuşuna tekrar basarsan, MOD-Switch LED'i mavi yanar ve sayısal bölümdeki normal sayı tuşları kullanıma hazır hale gelir.

SE

1. Fäll ut fötterna under tangentbordet så att det står i en ergonomisk ställning.
2. Sätt USB-kontakten i en ledig USB-port på datorn.
3. Tryck på knappen Mode Switch för att aktivera spelläget. Makrotangenterna 4 och 5 samt pil tangenterna kan nu användas.
4. Om du trycker på Mode Switch en gång till börjar Mode Switch-indikatorn lysa blått och du kan använda de vanliga sifertangenterna till Num Pad.