

**DE | Sicherheitshinweise**  
 Laser – Die ROCCAT™ Kone Pure Maus verwendet einen Lasersensor der Klasse 1. Das Licht dieses Sensors erfüllt die Anforderungen der ENIEC 60825-1:2007 bezüglich der Augensicherheit. Trotzdem ist es unter bestimmten Umständen möglich, dass direkter Kontakt des Auges mit dem Laser Sehschäden verursachen kann. Schauen niemals direkt in den Laserstrahl und richten den Strahl niemals auf andere Personen oder reflektierende Oberflächen wie z.B. Spiegel. Schauen niemals durch vergrößernde Geräte wie Lupen, Mikroskope oder ähnliche Geräte in den Laserstrahl.

**EN | Safety Instructions**  
 Laser – The ROCCAT™ Kone Pure mouse uses a Class 1 laser sensor. The light emitted by this sensor meets ENIEC 60825-1:2007 requirements with regard to eye safety. Despite this, under certain circumstances pointing the laser directly at the eyes may cause blindness. Never look directly at the laser beam and never point it at other people or reflective objects such as mirrors, for instance. Never look at the laser beam with magnifying devices such as magnifying glasses, microscopes or similar devices.

**ES | Medidas de seguridad**  
 Láser – El ratón ROCCAT™ Kone Pure utiliza un sensor láser clase 1. La luz de este sensor cumple los requisitos de la norma ENIEC 60825-1:2007 en lo referente a seguridad ocular. Aun así, dadas ciertas circunstancias, el contacto directo de la vista con el láser puede ser causa de daños oculares. No mires nunca directamente en el rayo láser, ni lo dirijas tampoco nunca hacia otras personas o superficies que lo reflejen, p. ej. espejos. No mires tampoco el láser a través de aparatos de aumento como lupas y microscopios o similares.

**JP | 安全指示**  
 Laser – The ROCCAT™ Kone Pureマウスはクラス1のレーザーセンサーを使用しています。このセンサーが放出する光は、目の安全に関するENIEC 60825-1:2007要件を満たしています。これにも関わらず、目に直接レーザーが当たる特定の環境下では失明を引き起こすこともあります。レーザービームを直接のぞき込んだり、人や鏡などの反射物体にレーザーを当てたりすることは絶対に避け、絶対に見ないでください。拡大鏡、顕微鏡など拡大装置でレーザービームを絶対に見ないでください。

**KO | 안전 지침**  
 레이저 – ROCCAT™ Kone Pure 마우스는 클래스 1 레이저 센서를 사용합니다. 이 센서에서 방출되는 빛은 시력 보호에 대한 ENIEC 60825-1:2007 요구 사항을 충족합니다. 그럼에도 불구하고 특정 환경에서 레이저를 눈에 직접 비추면 실명할 수 있습니다. 레이저 광선을 직접 쳐다보지 말고 다른 사람이나 이를 들어 가려고 같은 방식에 레이저 광선을 비추지 마십시오. 돋보기, 현미경이나 이와 유사한 장치와 같은 확대 장치를 가지고 레이저 광선을 쳐다보지 마십시오.

**RU | Указания по безопасности**  
 Лазер – В мышке ROCCAT™ Kone Pure используется лазерный датчик класса 1. Свет этого датчика отвечает требованиям ENIEC 60825-1:2007 относительно безопасности глаз. Несмотря на это при определенных обстоятельствах прямой контакт глаза с лазером может привести к ущербу для зрения. Никогда не смотрите прямо на луч лазера и никогда не направляйте луч на других людей или отражающие поверхности, например, зеркала. Никогда не смотрите на луч лазера через увеличивающие приспособления, такие как лупы, микроскопы и похожие приборы.

**SC | 安全说明**  
 激光 – ROCCAT™ Kone Pure 鼠标使用 Class 1 (1 类) 激光传感器。此传感器发射的激光符合 ENIEC 60825-1:2007 在眼睛安全方面的要求。尽管如此，在有些情况下，激光直射眼睛可能会造成失明。因此，切勿直视激光束，严禁将激光指向他人或反射物体，如镜子。切勿通过放大设备，如放大镜、显微镜或类似设备，观看激光束。

**TC | 注意事項**  
 雷射 – ROCCAT™ Kone Pure 滑鼠採用 Class 1 雷射感應器。此感應器發出的光線符合 ENIEC 60825-1:2007 的眼睛安全防護規定。然而在特定情況下，將雷射直接對準眼睛仍有可能會造成失明的危險。切勿直視雷射光線，或將雷射光線指向他人或鏡子等反射物體；切勿用放大鏡、顯微鏡等放大裝置觀看雷射光線。

**TH | ข้อควรระวังความปลอดภัย**  
 เลเซอร์ – เมาส์ ROCCAT™ Kone Pure ใช้เซนเซอร์เลเซอร์คลาส 1. แสงที่ปล่อยออกมาโดยเซนเซอร์นี้สอดคล้องกับข้อกำหนด ENIEC 60825-1:2007 ในด้านความปลอดภัยต่อสายตา ถึงแม้ว่าจะมีความปลอดภัยสูง แต่ในบางสถานการณ์ การสัมผัสโดยตรงไปที่ดวงตาโดยตรงอาจทำให้เกิดการตามอง ท่านมองเข้าไปที่แสงเลเซอร์โดยตรง และท่านดูผ่านแสงไปที่บุคคลอื่น หรือวัตถุที่มีการสะท้อนได้ เช่น กระจกเงา ท่านมองที่แสงเลเซอร์ผ่านอุปกรณ์ที่ขยายขนาด เช่น แว่นขยาย กล้องจุลทรรศน์ หรืออุปกรณ์ที่มีลักษณะคล้ายๆกัน

**VI | Hướng dẫn an toàn**  
 Laser – Chuột ROCCAT™ Kone Pure sử dụng bộ cảm biến laser Nhóm 1. Đèn phát sáng qua bộ cảm biến đã đáp ứng các quy định ENIEC 60825-1:2007 về an toàn cho mắt. Mặc dù vậy, trong một số trường hợp nhất định, chiếu thẳng tia laser vào mắt có thể gây mù mắt. Đừng bao giờ nhìn thẳng vào tia laser cũng như không chiếu tia laser vào người khác hay vào các vật phản chiếu như gương chiếu hậu. Đừng bao giờ nhìn tia laser bằng các thiết bị phóng đại như kính lúp, kính hiển vi hay các thiết bị tương tự.

## CONGRATULATIONS, WARRIOR!

You're now the proud owner of the ROCCAT™ KONE PURE – Core Performance Gaming Mouse. With legendary Kone blood pumping through its veins, the Pure delivers a powerful Next Gen combo of core essentials every skirmisher needs to rack up victory after victory. It's powered by a killer performance package loaded with the latest 8200DPI Pro Aim R3 laser sensor, a mighty 32-bit Turbo Core V2 72MHz ARM MCU processor, and the most advanced Tracking & Distance Control Unit around – all working in perfect harmony to deliver unrivaled battle performance. Add to that a wealth of ergonomic features designed for long-play comfort and a suite of the world's most advanced gaming software for max customization and it's easy to see why the Pure is good enough to be called a Kone.

### Pro-Aim R3 Laser Sensor with TDCU

The 8200 DPI Pro-Aim laser sensor offers superb tracking, transmitting even the fastest of mouse movements with no lag – for incredible precision delivering amazing gaming control. And thanks to the integrated Tracking and Distance Control Unit (TDCU), you can adjust the sensor precisely to your mouse pad, further improving tracking and minimizing pick-up-flight – and further improving your command capabilities.

### Easy-Shift[+]™ & ROCCAT™ Driver

The Kone Pure features world famous Easy-Shift[+]™ technology, which lets you set two functions for each mouse button and the scroll wheel – giving you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space. And the included ROCCAT™ Driver software lets you easily program and fine tune a multitude of settings – and gives you sound feedback with most changes – so you can game exactly how you like.

### 16.8 million-color lighting system

The Kone Pure is more than just a gaming mouse: It's a fully-customizable atmosphere booster that adds to the mood of every gaming session. That's because it boasts a large rear ROCCAT™ logo that you can illuminate in your choice of 16.8 million vibrant colors. You can even program the logo to “breathe” or rotate in your choice of shades – eye-catching effects that enhance your gaming experience and look excellent with your other ROCCAT™ gear.

## SPECIFICATIONS

### PACKAGE CONTAINS


- ROCCAT™ Kone Pure Core Performance Gaming Mouse
- Quick-Installation Guide

### SYSTEM REQUIREMENTS

- Windows® XP, Vista® 32/64 bit, Windows® 7 32/64 bit, Windows® 8/Windows® 8 Pro
- USB 2.0 Port
- Internet connection (for driver installation)

### TECH SPECS

- Pro-Aim Laser Sensor R3 with up to 8200dpi
- 1000Hz polling rate
- 1ms response time
- 12000fps, 10.8 megapixel
- 30G acceleration
- 3.8m/s (150ips)
- 16-bit data channel
- 1-5mm Lift off distance
- Tracking & Distance Control Unit
- 72MHz Turbo Core V2 32-bit Arm based MCU
- 576kB onboard memory
- Zero angle snapping
- 1.8m Braided USB cable

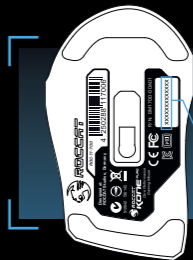

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER (LOCATED ON THE BOTTOM LABEL) FOR REGISTRATION. SIGN IN AT: [WWW.ROCCAT.ORG/REGISTER](http://WWW.ROCCAT.ORG/REGISTER)

ROCCAT GmbH  
 Otto von Bahnenpark, Paul-Deussau-Str. 3G, 22761 Hamburg, Germany

© 2014 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

[WWW.ROCCAT.ORG/SUPPORT](http://WWW.ROCCAT.ORG/SUPPORT)

Our support team is ready to help with any technical questions. Just send an e-mail to [support@roccat.org](mailto:support@roccat.org). Or visit our website at:

Should you need assistance ...

## QUICK-INSTALLATION GUIDE


IMPORTANT DOCUMENT





## A DEFAULT BUTTON ASSIGNMENT (no driver installed)

- 1 = Left mouse button
- 2 = Right mouse button
- 3 = Middle mouse button & universal scroll
- 4 = Page forward (Browser)
- 5 = Easy-Shift[+]™ button
- 6 = Mouse wheel up
- 7 = Mouse wheel down
- 8 = DPI up
- 9 = DPI down

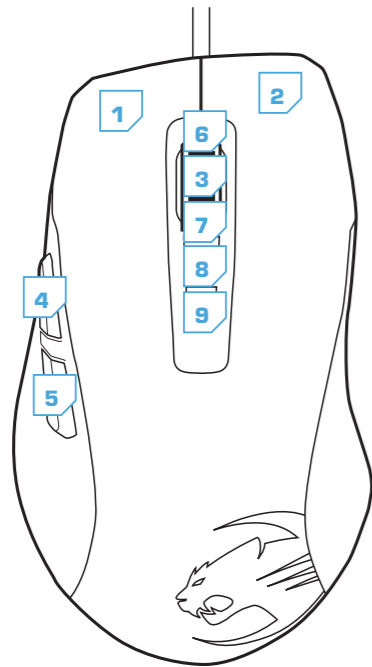

## ROCCAT™ EASY-SHIFT[+]™ TECHNOLOGY

### GREATLY INCREASE YOUR MOUSE FUNCTIONS

Ingenious Easy-Shift[+]™ technology lets you assign two functions to each of your mouse buttons and the scroll wheel – putting a huge amount of easily-wielded power right at your fingertips. The Kone Pure's Easy-Shift[+]™ button works just like the shift key on a keyboard. Simply hold it down and simultaneously press one of the other mouse buttons – or the scroll wheel (including up and down) – and you execute a second function. This incredibly handy feature increases the number of available functions from 9 to 16.

### GET EVEN MORE MACRO MIGHT

Easy-Shift[+]™ also lets you control powerful driver functions right from your mouse – giving you quick control over things like your multimedia options. For example, you can launch your media player, switch music tracks and adjust volume – all with the simple press of a mouse button or scroll of your mouse wheel. With the Kone Pure, flawless ergonomics and maximum functionality coexist in perfect harmony.



Use the **Easy-Shift[+]™** button (#5) to access 2nd level functions on all other mouse buttons and wheel. This way you can duplicate the number of buttons by assigning **two** functions to each one.


### EASY-SHIFT[+]™ EXAMPLES:

Easy-Shift[+]™ WoW:	Easy-Shift[+]™ CS:
5 + 1 = Mount up	5 + 1 = Throw HE
5 + 2 = Dismount	5 + 2 = Throw flash
5 + 3 = Autorun	5 + 3 = Throw smoke
5 + 4 = Use trinket	5 + 4 = Show scores
5 + 6 = Your macro #1	5 + 6 = Buy CT equipment
5 + 7 = Your macro #2	5 + 7 = Buy T equipment
5 + 8 = Pet attack	5 + 8 = Primary weapon
5 + 9 = Pet follow	5 + 9 = Secondary weapon

Easy-Shift[+]™ Multimedia:	Easy-Shift[+]™ Browser:
5 + 1 = Play or pause	5 + 1 = Page back
5 + 2 = Stop playback	5 + 2 = Page forward
5 + 3 = Mute volume	5 + 3 = New tab
5 + 4 = Switch to full screen & back	5 + 4 = New window
5 + 6 = Play the previous item	5 + 6 = Switch to previous tab
5 + 7 = Play the next item	5 + 7 = Switch to next tab
5 + 8 = Volume up	5 + 8 = Volume up
5 + 9 = Volume down	5 + 9 = Volume down

## B DEFAULT BUTTON ASSIGNMENT: EASY-SHIFT[+]™ (no driver installed)

- 5 + 1 = Page back (Browser)
- 5 + 2 = Page forward (Browser)
- 5 + 3 = Mute volume
- 5 + 4 = Page back (Browser)
- 5 + 5 = Disabled
- 5 + 6 = Volume up
- 5 + 7 = Volume down
- 5 + 8 = Previous track
- 5 + 9 = Next track

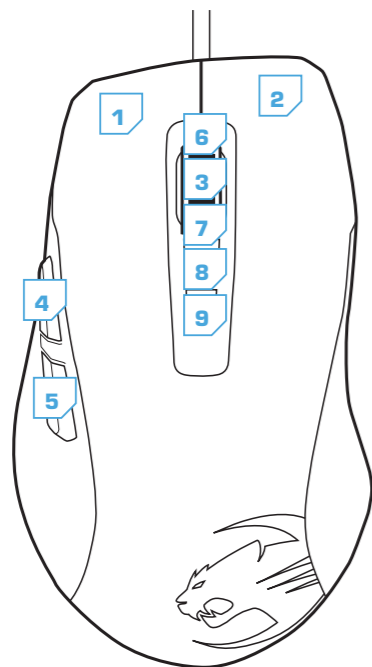

### DE

#### ANLEITUNG

- Verbinde den USB-Stecker der ROCCAT™ Kone Pure mit einer freien USB-Schnittstelle.
- Starte deinen Computer und stelle eine Verbindung mit dem Internet her.
- Gebe in die Adresszeile deines Webbrowsers die folgende URL ein „www.roccat.org/support“ und drücke Enter.
- Klicke in der linken Navigationsleiste auf den Punkt „ROCCAT™ Kone Pure“. Lade dir auf der sich öffnenden Seite die neueste Treiber-Software herunter.
- Starte die Treiber-Installation und folge bitte den weiteren Anweisungen auf dem Bildschirm.

### EN

#### INSTRUCTIONS

- Plug the USB connector on your ROCCAT™ Kone Pure into any free USB port.
- Boot your computer and connect to the internet.
- Enter 'www.roccat.org/support' in your browser and hit the return key.
- In the navigation bar on the left, go to 'ROCCAT™ Kone Pure'. Download the latest driver from the web page that opens.
- Start the driver installation process and follow the on-screen instructions.

### ES

#### INSTRUCCIONES

- Enchufa el conector USB del ROCCAT™ Kone Pure a un puerto libre USB.
- Inicio tu ordenador y establece la conexión de Internet.
- Escribe en tu navegador Web la siguiente URL: www.roccat.org/support y pulsa Enter.
- En la barra izquierda de navegación haz clic en el punto "ROCCAT™ Kone Pure". En la página que se abre a continuación descárga el software de controlador más actualizado.
- Inicio la instalación del controlador y sigue las instrucciones que aparecen en pantalla.

### JP

#### 使用説明

- ROCCAT™ Kone Pure のUSBコネクタを空いているUSBポートに差し込みます。
- コンピュータを起動し、インターネットに接続します。
- 'www.roccat.org/support' とブラウザに入力し、確定キーを押します。
- 左側のナビゲーションバーから、'ROCCAT™ Kone Pure'を開きます。開いたウェブページから最新のドライバをダウンロードします。
- ドライバのインストールプロセスを開始し、画面上の指示に従ってください。

### KO

#### 지시사항

- ROCCAT™ Kone Pure 의 USB 커넥터를 비어 있는 USB 포트에 연결합니다.
- 컴퓨터를 부팅하고 인터넷에 연결합니다.
- 브라우저에 ' www.roccat.org/support ' 를 입력하고 리턴 키를 누릅니다.
- 왼쪽에 있는 탐색 바에서 ' ROCCAT™ Kone Pure ' 로 이동합니다. 웹 페이지가 열리면 최신 드라이버를 다운로드합니다.
- 드라이버 설치 과정을 시작하여 화면 지시사항을 따릅니다.

### RU

#### ИНСТРУКЦИИ

- Соедини USB-штекер ROCCAT™ Kone Pure со свободным USB-портом.
- Запусти компьютер и выйди в интернет.
- Введи в адресной строке браузера адрес „www.roccat.org/support“ и нажми Enter.
- Нажми на левой навигационной панели пункт „ROCCAT™ Kone Pure“. Загрузи с открывшейся страницы самые последние драйвера.
- Запусти инсталляцию драйвера и следуй дальнейшим указаниям на экране.

### SC

#### 说明

- 將 ROCCAT™ Kone Pure 的 USB 接头插入可用的 USB 端口。
- 启动计算机并连接到 internet。
- 在浏览器中输入 www.roccat.org/support，点击回车键。
- 在左边的导航栏中，转到“ROCCAT™ Kone Pure”。从打开的网页中下载最新驱动程序。
- 开始驱动程序安装进程，按照屏幕上的说明进行操作。

### TC

#### 使用說明

- 將 ROCCAT™ Kone Pure 的 USB 接頭插入尚未使用的 USB 連接埠。
- 開啟電腦並連接網路。
- 於瀏覽器輸入「www.roccat.org/support」，再按下輸入鍵。
- 於左側的導覽列中選擇「ROCCAT™ Kone Pure」，並從開啟的網頁中下載最新的驅動程式。
- 開始安裝驅動程式，並依據螢幕上的指示操作。

### TH

#### คำแนะนำ

- เสียบหัวต่อ USB ของ ROCCAT™ Kone Pure กับพอร์ต USB ที่ว่างอยู่
- บูทเครื่องคอมพิวเตอร์ แล้วเชื่อมต่อนิตเตอร์เน็ต
- พิมพ์ 'www.roccat.org/support' ในเบราว์เซอร์ของคุณ แล้วกดปุ่ม return
- ในแถบนำทางด้านซ้าย ไปที่ 'ROCCAT™ Kone Pure' ดาวน์โหลดไดรเวอร์ล่าสุดจากเว็บเพจที่เปิดมา
- เริ่มกระบวนการติดตั้งไดรเวอร์ และทำตามคำแนะนำบนหน้าจอ

### VN

#### HƯỚNG DẪN

- Cắm đầu cắm USB ROCCAT™ Kone Pure's vào mọi cổng cắm USB trống.
- Khởi động máy tính của bạn và kết nối internet.
- Nhập 'www.roccat.org/support' vào trình duyệt và nhấn nút trở về.
- Trong thanh chuyển hướng ở bên trái, vào 'ROCCAT™ Kone Pure'. Tải driver mới nhất từ website đang mở.
- Khởi động quá trình cài đặt driver và thực hiện theo các hướng dẫn trên màn hình.